



Owner's Manual

Do not discard, keep for future reference

TowMate Wireless Light Systems Guide to Operations

1} Plug the transmitter into your truck's 4 pin connector.

2} In the daytime simply turn on the remote control lights by flipping the switch up. The taillights will be illuminated and the lights are ready to receive a signal from the truck.

To Charge be sure to find a full time power source even when the ignition is off on the vehicle (i.e. your cigarette lighter). You cannot overcharge your lights. Whenever your lights are not being used Plug them in for recharge. The batteries will resist developing a memory so you do not have to discharge them all the way.

If you have further questions please call 800-680-4455 or 479-925-2131


TowMate provides a lifetime warranty on the electronics. Shipping is not included in the warranty. Call the 800 number anytime if you have a problem.


BE SURE TO CHECK THE FUSE IN YOUR CHARGE CORD IF FOR SOME REASON YOUR LIGHTS QUIT WORKING. REPLACE WITH A 20 AMP FUSE.

The red indicator light will illuminate even if the charger is plugged into the light only. An easy way to check the fuse would be to plug the charger into the vehicle first and check for the red LED indication before plugging into the light.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

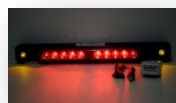

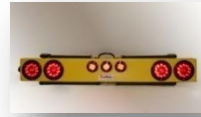

Notice:
TowMate, LLC is no longer affiliated with Blades TowRight. We now have our own 36" & 48" cases. Don't be fooled, if your light does not have the TowMate label it is not the real thing and the lifetime warranty we offer will not be honored. As always our prices remain competitive.

Feel free to call us for pricing details at 1-800-680-4455 or 479-925-2131

These systems provide you with the benefit of radio controlled lights in a durable plastic housing which will last you a lifetime.

If your radio system fails for any reason you can now plug in your cord (not included) and continue to your destination.

The electronics easily detach from the connector and can be sent to TowMate for repair or replacement. You do not need to be without your truck bar ever again.

The new LED lights which are now standard on all TowMate wireless light bars will provide many hours of use between recharge. Always remember to place your bar on recharge whenever it is not in use. You CAN NOT over charge the batteries!

To recharge your truck bar use the 7-pin connector provided with your system. The center pin is the 12V+ pin for RECHARGE and the top silver pin is for GROUND. Be sure to find a full time power source even when the ignition is off on the vehicle. **IT IS VERY IMPORTANT TO PLACE A 20 AMP FUSE ON THE 12V+ WIRE.**

The marker lights will always be on when the bar is on. When you begin transmitting a signal from your truck the bar will begin to respond to left and right turn, stop and hazard.

Be sure to mark your name and phone number on the case for easy identification in the event it is left behind after a tow.

Best of all... enjoy your new found freedom from wires. You now own the very best available today.

Your bar has a lifetime warranty on the electronics provided by TowMate, LLC
Call Toll Free: 800-680-4455 or 479-925-2131

Wiring Code
White=Ground
Yellow=Left Turn
Green=Right Turn
Red=Brake

