

# TowMate®

"World's Only Full Functioning  
Wireless Taillight System"

## I-MON INTERACTIVE MONITOR KIT




### INSTALLATION INSTRUCTIONS

- 1. Identify the 4 components that make up your Monitor Kit**
  - a. Monitor Head (LCD Display)
  - b. Transmitter (Plugs into truck)
  - c. Transceiver (Plugs into the light)
    - i. *Only necessary when purchased as a kit to upgrade an existing unit that was not previously iMon compatible.*
- 2. Remove the receiver board from inside of your towlight. (Only when upgrading older unit purchased prior to 9/1/2010)**
  - a. This is located on the left hand side of unit (same side as the switch).
  - b. Open the light by removing the end cap (on most light duty tow lights), or by removing the left-most LED on the face the unit (on medium & heavy duty towlights).
  - c. Locate the receiver inside of the unit and unplug it.

- d. Plug in the transceiver that came with your Monitor Kit.
  - e. Close the light back up in the same manner you opened it in step 2-b.
- 3. Plug the transmitter into the receptacle on the truck.**
  - 4. Plug the monitor head into the cigarette lighter socket in the cab of the truck.**
  - 5. With your light and monitor powered on, activate the trucks' left turn signal and wait for the monitor to flash a left arrow.**
  - 6. You should now be able to monitor the status of your wireless lighting system in Real Time. Features include:**
    - a. **Signal verification:** As you perform the Stop, Tail, Turn functions, the I-MON should display a correlating symbol that will indicate that the light is responding properly.
    - b. **Remaining Battery:** At the bottom of the screen, a green status bar indicates the light is full/mostly full of charge. A yellow status bar indicates that the light is around halfway full of charge. A red status bar indicates that the light could die soon if not placed on charge.
    - c. **Light Present Verification:** If your light is left behind, stolen, or falls off of a load, the I-MON will sound an alarm and flash a  symbol after about 30 seconds to verify that the unit is missing. . After about 45-60 seconds, the unit will stop alarming. This give you the ability to power your light off and store it without having to unplug the monitor head itself.
    - d. **Auxiliary Audio Out:** If you feel the need to, you can run an auxiliary audio cable from the jack on the bottom of the monitor head and tie-in to an external alarm or speaker.

# I-MON Layout

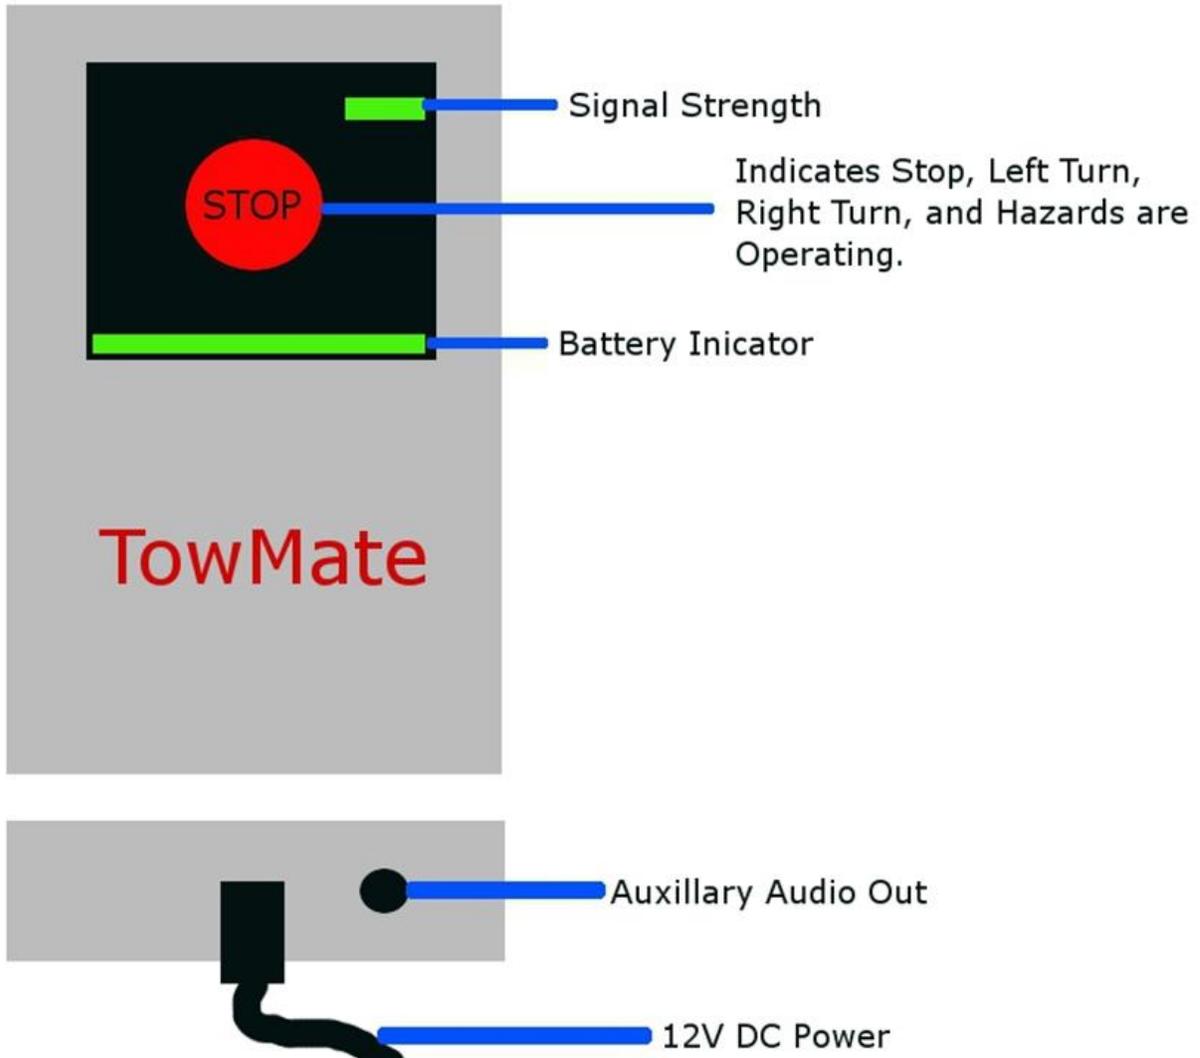

If you have any questions relating to our products, or technical assistance,

Call (800) 680-4455, or Visit [www.TowMate.com](http://www.TowMate.com).